



WATERPROOFING TAPE & COLLAR - INSTALLATION INSTRUCTIONS

Waterproofing Tape

Our premium 3-ply waterproofing tape offers robust protection for floors and walls in tile installations, effectively preventing water penetration.

Application

This sealing tape is designed to be applied beneath porcelain/ceramic tiles and stone, providing exceptional waterproofing properties. It is ideal for use with our Tile Redi® shower pans, particularly where the splash wall interfaces with wall boards and around shower fixtures or other wet areas.

When applied with the appropriate adhesives or sealants, our waterproofing tape meets the stringent requirements for high moisture stress environments, such as showers.


Installation

Wall Collar:

Prepare the pipe penetrations and mixing valves by applying Redi Sealant™ or other MS Polymer sealant along the opening with a ¼" trowel. Slide the wall over the pipe or mixing valve and press firmly into the setting material. Remove any trapped air and guarantee full adhesion to the material by spreading the setting material from the inside out using a trowel or straightedge with rounded corners.

Waterproofing Tape:

Continue applying with Redi Sealant or other MS Polymer sealant on the shower pan splash wall to wall transition from the corner outward for the first strip of the Sealing Tape. Overlap the corners by 2". Set the tape and remove all air pockets and excess material. Where two strips of sealing tape will connect, be certain to overlap the material by 2".

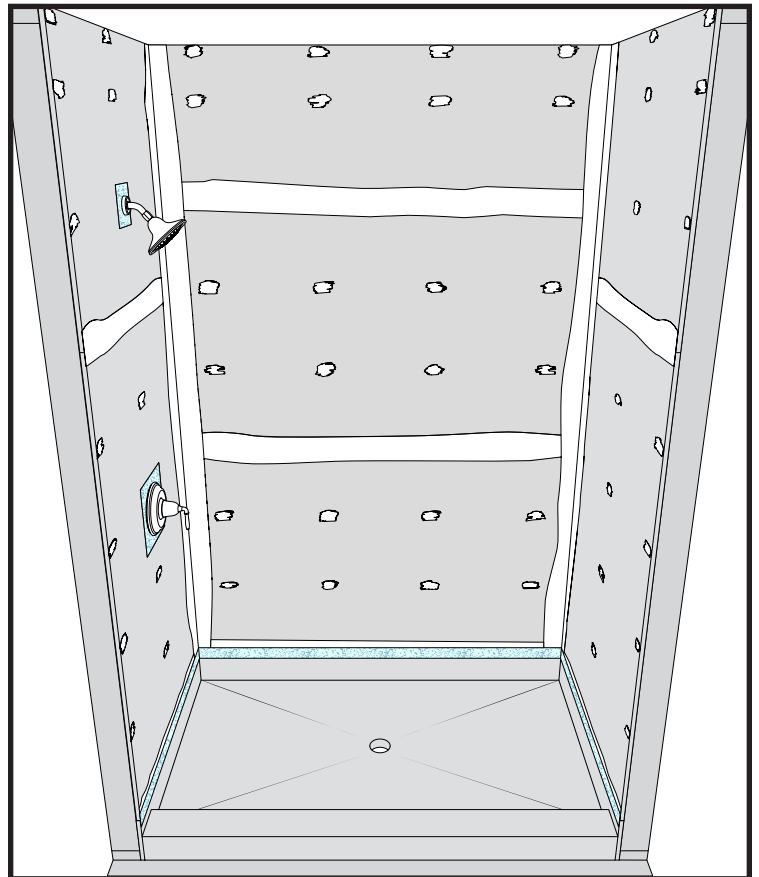

436 East 36th Street, Charlotte, NC 28205
800.232.6156 | sales@tileredi.com

www.tileredi.com

Tile Redi® trademarks and logos are owned by and the Intellectual Property of Tile Redi, LLC.
©2024 Tile Redi, LLC. All Rights Reserved.

PATENT: www.TileRedi.com/PatentMarkings