



(Not to scale)

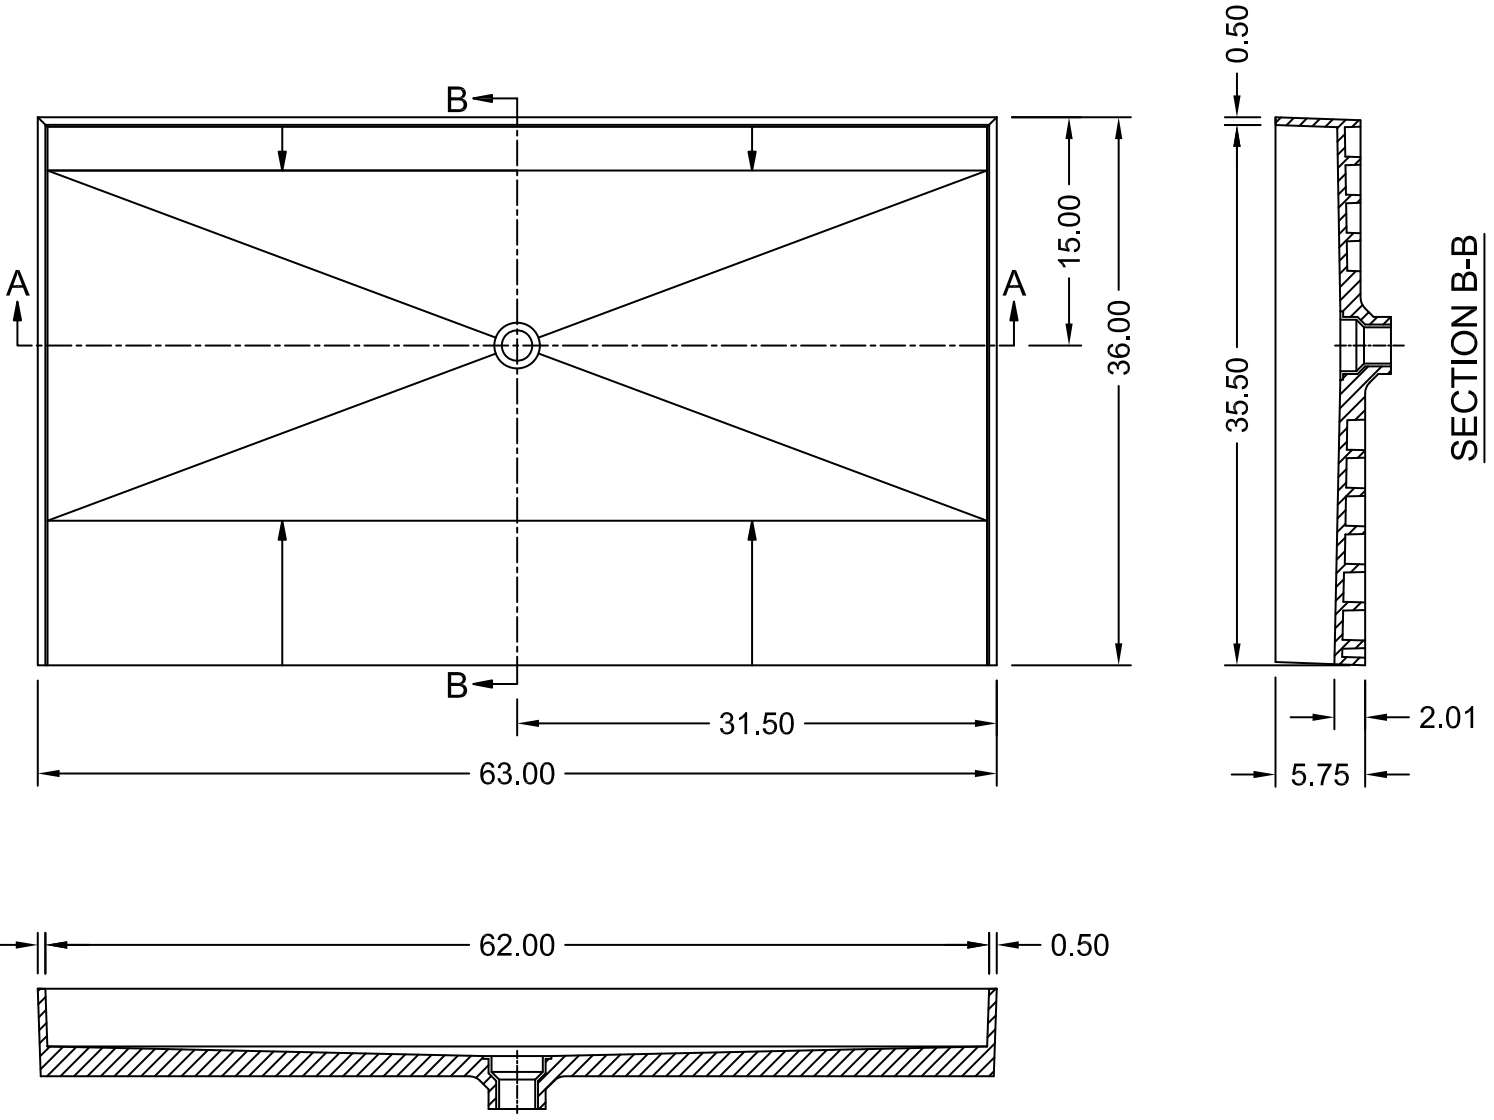

SECTION A-A

**Redi Free Installation:** For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.



Toll Free 800.232.6156 techsupport@tileredi.com  
 Tel: 954.323.0125  
 Fax: 954.344.8064 www.tileredi.com



V.2013.01.29